


CHANGING A TIRE



Find a Safe Location

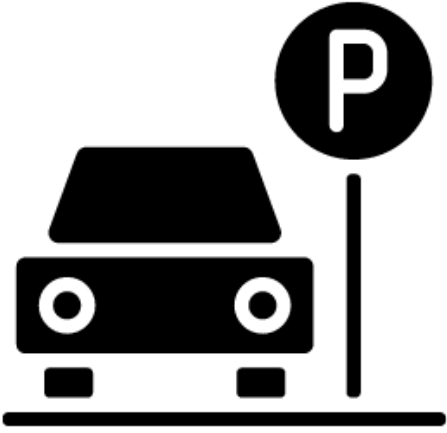

Find a flat and level surface away from traffic if possible. Engage the emergency brake and turn your car off. Turn on your hazard lights to alert other drivers of your presence


Loosen the Lug Nuts

Use the lug wrench to loosen the lug nuts by turning them counterclockwise. Be careful not to remove the lug nuts entirely, as you'll need them to keep the wheel in place



Jack Up the Car

Consult with your owner's manual on the proper location to put the jack. Once the jack is in place, raise the car until the flat tire is about four to six inches above the ground

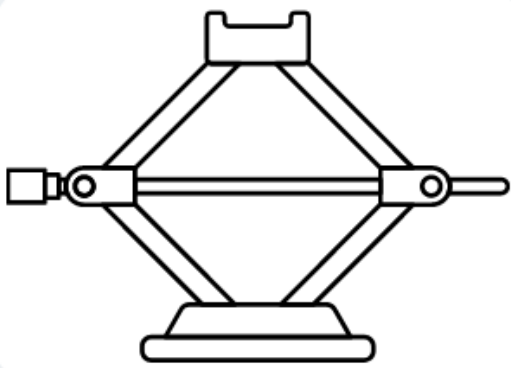

Remove the Lug Nuts

Once your car is jacked up, remove the lug nuts and place them in a safe location where they won't get lost. Make sure they don't roll away! Then, gently pull the flat tire off the car.



CHANGING A TIRE



Install the Spare Tire

Place the spare tire by lining up the holes. Push the tire onto the hub until it is flush against it.

Replace the Lug Nuts

Replace the lug nuts by hand and then tighten them using the lug wrench. Ensure that the nuts are tightened. Do not over tighten



Lower the Car

Use the jack to lower the car slowly until the spare tire touches the ground. Remove the jack and use the lug wrench to tighten the lug nuts further until snug.



Replace the Spare ASAP

It's important to get a new tire on as soon as possible. Most manufacturers recommend driving a maximum of 50 MPS and a maximum distance of 70 miles on a spare tire.

